





AWS is an Australian owned and operated company which imports and wholesales curtain and blind hardware with a focus on working alongside some of Australia's largest architects, developers, commercial and domestic retailers with a view to being able to offer a full suite of products for any type of development.

AWS continues to look for a competitive advantage realising that many architects and end users want to make a statement with their window furnishings. AWS offers the ability to provide custom made solutions through its Saber motorised curtains and blinds, venetian blinds, light filtering and blockout roller blinds, pole sets and a comprehensive range of tracking systems including applications for residential homes, hospitals, aged care, psychiatric wards and hotel developments.

With this philosophy AWS has expanded to have distributorship or representation in South Australia, Western Australia, Victoria and Queensland with the market being serviced from our customer service centre in Sydney and warehouses in Melbourne and Sydney.

The trend today is to source product off shore, in fact we have gone one step further by establishing our own manufacturing entity in Shanghai, China. The factory is run with western style management and controls to ensure that product designed for Australia meets our rigorous standards. With a combined total of 180+ years experience AWS are more than capable of servicing your requirements.



H O S P I T A L S Y S T E M

Contents

Product Outline
Product Applications
Typical Room Designs
Installation
Components

Product Outline

Screen Tracks

The System 90 AWS Meditrack Bedscreen and Mini Track systems are ideal for use in, but not limited to, intensive care units, emergency departments, nursing homes, aged care, general practices and dental surgeries to help facilitate patient privacy.

Extruded from commercial grade aluminium AWS Bedscreen Track is strong and versatile and can reach spans of up to 3 meters long without supports. If distances are greater than three meters, or supports are required, the track can be suspended using dropper rods, top fixed or fixed using wall brackets (please refer to the installation page for more details).



Track HT6000






Track MT6000

Track MT6000 Profile

23.2mm

Available in both clear anodised and powder coated white the AWS Bedscreen and Mini Track can provide you with a cost effective means to provide privacy to any area. The composition of the aluminium also allows both the tracks to be bent to specification

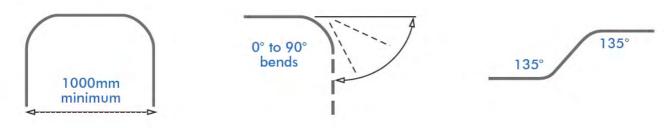


AWS MEDITRACK

Product Outline

Cassette System

The curtain cassette system allows for easy removal of the curtains without lifting and replacing the curtain hook by hook. With this system you are able to draw the curtain into the cassette and with a release of the knob the entire curtain will fall away for easy maintenance. For your convenience the cassettes are available in left, right and top release functions.

SIDE FIX

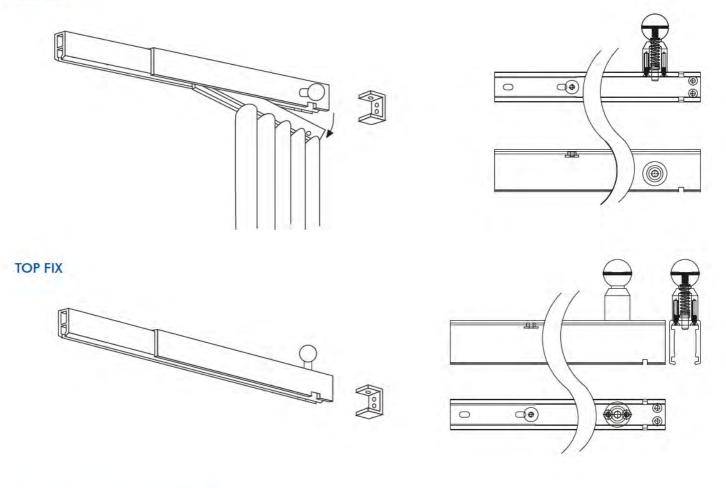


How to load the Cassette System

- / With the curtain attached slide the rotatable runners (07038) into the cassette 'inner'
- Z To lock the cassette 'inner' into the outer casing of the cassette (which has already been fitted) slot the 'inner' against the stopper at an angle and bring the other side up. Release the knob and bring the 'inner' into the outer casing, making sure the knob retracts back into the cassette system.
- **3** You can now draw the curtain out of the cassette and along the bedscreen track. To remove the curtain, reverse the process.





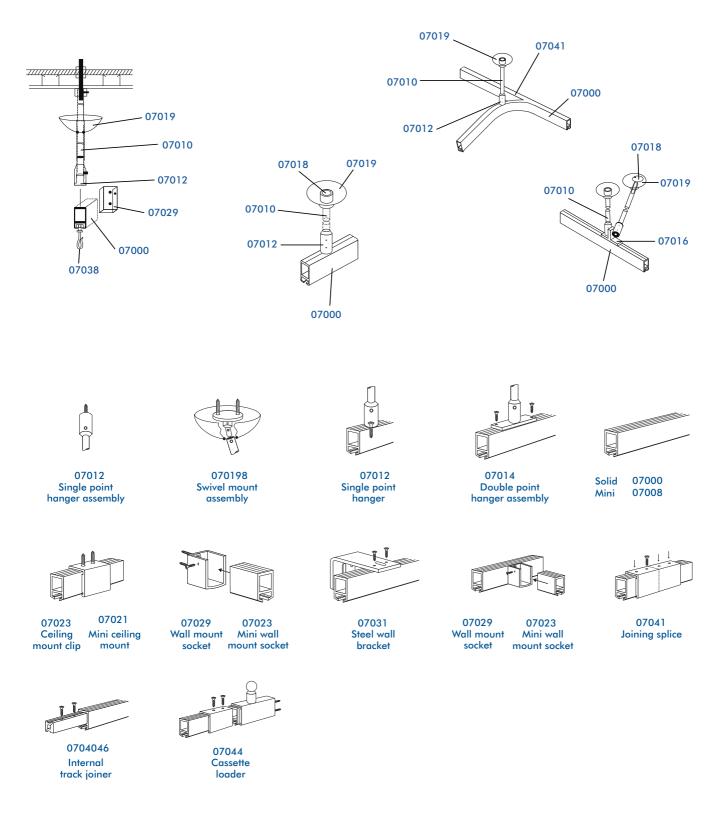


N.B. - All codes used are WHITE - For full range of codes, Please see page 7


AWS MEDITRACK


Typical Room Designs

AWS Meditrack

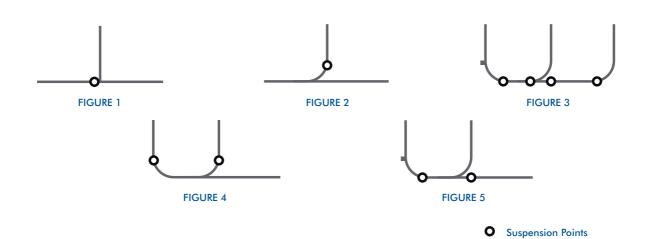

AWS Mini Track

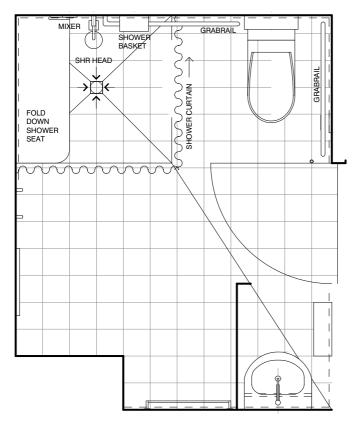

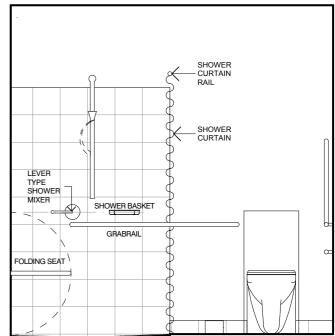

A.W.S All Window Solutions Pty Ltd

Installation

Ceiling Support Assembly

- I Place the AWS Bedscreen or AWS Mini Track on the floor directly below the area where the track is to be fitted.
- **2** Determine where the ceiling support is to be mounted on the ceiling and the track, taking into account ceiling fans, air conditioning ducts, lights and other obstructions.
- 3 Mount the Double Point Hanger (07014) into the desired location of the AWS Bedscreen or AWS Mini Track, keeping in mind the dropper rod (07010) must be mounted directly above into a solid fixing point.
- **4** Fix the wall mount bracket to the walls at the specified minimum height from the floor, using 2100mm as the minimum height from the floor to the bottom of the wall mount bracket.
- **S** Slide one swivel curtain hook (07038) every to every 10cm of track into the AWS Bedscreen or AWS Mini Track.
- Lift the AWS Bedscreen or AWS Mini Track up, making sure it is supported at the necessary height and is square to the ceiling and floor. Extra personnel or supports may be required at this time.
- To find the fixing point in the ceiling of the Single Point Hanger (07012) drop a plumb line from directly above the Double Point Hanger (07014) and mark the spot on the ceiling and fix the Single Point Hanger (07012).
- 8 Measure the Dropper Rod (07010) and cut to the measurement. Place the rod inside the Single Point Hanger (07012) and Double Point Hanger (07014)

Quotations

The following information is required for quotation or supply purposes:

- Type of fixing (suspended or top fix)
- Fixing substrate (anchored to concrete soffit, plasterboard ceiling, ceiling grid, suspended ceiling grid etc.)
- Plans of installation, reflected ceiling plans, track layouts and scale plans or site measurements or copies of quantity schedules. Allowances must be made for mechanical services, sprinklers, light fittings and ventilation.
- Fixing span
- Height above floor/dropper length
- Track finish e.g. white powder coat, satin silver anodised
- Track measurements
- Bend details e.g. location and extent of bend in degrees and radius where applicable
- Number of Meditrack curtain changing cassettes and type, if required

AWS MEDITRACK



COMPONENT	CODE DESCRIPTION		UNIT	INNER PACK	OUTER PACK	
	07000	4M Hospital Track White	Length	(4)	T	
	07001	4M Hospital Track Silver	Length	-	1	
	07002	6M Hospital Track White	Length	12	1	
	07003	6M Hospital Track Silver	Length	5	1	
	07008	6M Mini Track White	Length	9	1	
	07004	6M Mini Track Silver	Length	-	1	
	07010	4M Suspension Tube White	Length	4	1	
	07011	4M Suspension Tube Silver	Length	-	I	
_ ₽_₽_₽_₽_ (Q;+	07040	Internal Track Joiner	Each	121	20	
· · · · · · · · · · · · · · · · · · ·	07041 White 07042 Silver	Joining Splice White / Silver	Each	9	10	
	07035 White 07036 Silver	Track End Stop (Solid) White / Silver	Each	50	400	
	07033 White 07034 Silver	Mini Track End Stop White / Silver	Each	50	400	



Components

COMPONENT	CODE	DESCRIPTION	UNIT	INNER PACK	OUTER PACK
	07029 White 07030 Silver 07077 Apo Grey	Wall Mount Track Socket (Solid) White / Silver / Apo Grey	Each	25	200
	07027 White 07028 Silver 07076 Apo Grey	Mini Track Wall Mount Socket White / Silver / Apo Grey	Each	25	200
	07045	Cassette Loader Complete Silver	Each		1
	07044	Cassette Loader Complete White	Each	9	1
	07047	Cassette Loader Left Hand Silver	Each	-	1
	07049	Cassette Loader Right Hand Silver	Each	÷	1
	07046	Cassette Loader Left Hand White	Each	ê. I	T.
	07048	Cassette Loader Right Hand White	Each	*	1
	07023 White 07024 Silver	Ceiling Mount Clip (Solid) White / Silver	Each	25	200
	07021 White 07022 Silver	Mini Track Ceiling Mount Clip White / Silver	Each	25	200
0 °	07031 White	Steel Wall Bracket White	Each	25	200
0	07032 Silver	Steel Wall Bracket Silver	Each	25	200
	07080 Apo Grey	Steel Wall Bracket Apo Grey			

AW S MEDITRACK



COMPONENT	CODE	DESCRIPTION	UNIT	INNER PACK	OUTER PACK
ĴĴ	07038	Swivel Curtain Hook White	Each	250	2000
节哥	07037 White 07078 Grey	Rotatable Runner White / Grey	Each	8	200
	07016 White 07017 Silver	Vee Hanger Assembly White / Silver	Each	25	200
	07012 White 07013 Silver 07074 Apo Grey	Single Point Hanger Assembly White / Silver / Apo Grey	Each	50	400
G	07014 White 07014 Silver 07075 Apo Grey	Double Point Hanger Assembly White / Silver / Apo Grey	Each	50	400
	07018	Suspension Tube Swivel Mount	Each	25	200
	07019 White 07020 Silver	Suspension Tube Ceiling Cover White / Silver	Each	25	200



A.W.S

All Window Solutions Pty Ltd

+61 (2) 4729 4744 🕿 +61 (2) 4729 4755 📇 sales@allwindowsolutions.com 🖂 www.allwindowsolutions.com 💻 Unit 2, 20-21 Lambridge Place, Penrith NSW 2750

CONTACT YOUR AUTHORISED STOCKIST

Cover photo of the Royal Children's Hospital provided by Kristian Gehradte Photography, info@kgphotography.com.au Internal shots provided courtesy of the Department of Health